

Before You Use Dynamic Service Activator

Before you use Dynamic Service Activator, you must:

- Deploy a working SRC network.
- Configure and start the application server.

See Configuring the Web Application Server (SRC CLI).

- Configure a NIC that identifies the SAE reference for each subscriber type.

See Configuring the NIC (SRC CLI).

- Create the Java scripts that Dynamic Service Activator invokes (see the SAE CORBA Remote API documentation on the Juniper Networks Web site at <http://www.juniper.net/techpubs/software/management/src/api-index.html>).
- Load the sample data with the `request system ldap load dsa-configuration` command.

See Sample Data for Dynamic Service Activator.

Related Topics

- Overview of Dynamic Service Activator
- Dynamic Service Activator in a Redundant Environment
- Starting Dynamic Service Activator (SRC CLI)
- SRC CLI Commands to Monitor Dynamic Service Activator

