

## Configuring Directory Connection Properties for External Subscriber Monitor

---

Use the following configuration statements to configure directory connection properties for External Subscriber Monitor:

```
slot number external-subscriber-monitor initial directory-connection {  
    url url;  
    backup-urls backup-urls...;  
    principal principal;  
    credentials credentials;  
    timeout timeout;  
    check-interval check-interval;  
    blacklist;  
    protocol (ldaps);  
    snmp-agent;  
}
```

To configure directory connection properties:

1. From configuration mode, access the configuration statement that configures the directory connection properties.

```
user@host# edit slot 0 external-subscriber-monitor initial directory-connection
```

2. Specify the properties for External Subscriber Monitor.

```
[edit slot 0 external-subscriber-monitor initial directory-connection]  
user@host# set ?
```

3. (Optional) Verify your configuration.

```
[edit slot 0 external-subscriber-monitor initial directory-connection]  
user@host# show
```

