

## Changing the Configuration for the NIC Proxy Cache

---

You can modify cache properties for the NIC proxy to optimize the resolution performance for your network configuration and system resources. Typically, you can use the default settings for the cache properties. The configuration statements are available at the Advanced editing level.

Use the following configuration statements to configure the NIC proxy cache:

```
slot number external-subscriber-monitor nic-proxy-configuration radius-accounting-nic
  cache {
    cache-size cache-size;
    cache-cleanup-interval cache-cleanup-interval;
    cache-entry-age cache-entry-age;
  }
```

To configure the cache for a NIC proxy:

1. From configuration mode, access the configuration statement that configures the NIC proxy configuration. In this sample procedure, the NIC proxy called radius-accounting-nic is configured.

```
user@host# edit slot 0 external-subscriber-monitor nic-proxy-configuration
radius-accounting-nic cache
```

2. Specify the cache properties for the NIC proxy.

```
[edit slot 0 external-subscriber-monitor nic-proxy-configuration radius-accounting-nic
  cache]
user@host# set ?
```

3. (Optional) Verify your configuration.

```
[edit slot 0 external-subscriber-monitor nic-proxy-configuration radius-accounting-nic
  cache]
user@host# show
```

