

Sending Notifications for System Log Messages to Users (C-Web Interface)

To configure the system log server to send notifications to users:

1. Click **Configure**, expand **System**, and click **Syslog**.

The Syslog pane appears.

2. From the Create new list, select **User**.
3. Type a name for the file in the dialog box, and click **OK**.

The User pane appears.

4. To configure a message group, select the message group that you want to configure from the Create new list.

You can configure multiple message groups in the log file.

5. To configure a severity level:
 - a. In the side pane, click the log file.
 - b. From the Severity box, select the severity level that you want to track with the log file, and click **Apply**.

- Related Topics**
- Sending Notifications for System Log Messages to Users (SRC CLI)
 - Saving System Log Messages to a File (C-Web Interface)
 - Sending System Log Messages to Other Servers (C-Web Interface)
 - Overview of the C-series Controller Log Server

