

Installing Server Licenses for C-series Controllers (SRC CLI)

To use a server license on a C-series Controller, a Juniper Networks database must run on the same C-series Controller as the license server.

To install server licenses for C-series Controllers:

1. From operational mode, enable the license server.

```
user@host> enable component licSrv
```

2. Install the server license.

```
user@host> request license import master-license file-name file-name
```

3. Verify that a valid license is available.

```
user@host> show sae licenses
```

4. Configure license manager for the SAE.

See Configuring License Manager for an SAE on a C-series Controller (SRC CLI).

- Related Topics**
- Obtaining an SRC License
 - Overview of the SRC License Server
 - Types of SRC Licenses
 -

