

## Installing Server Licenses (C-Web Interface)

---

To use a server license on a C-series Controller, a Juniper Networks database must run on the same C-series Controller as the license server.

To install server licenses for C-series Controllers:

1. Click **Manage > Enable** to enable the license server.

The Enable pane appears.

In the Component box, select **licSvr**, and click **OK**.

2. Click **Manage > Request > License > Import** to install the server license.
3. Enter information as described in the Help text in the main pane, and click **OK**.
4. Click **Monitor > SAE > Licenses** to verify that a valid license is available.
5. Configure license manager for the SAE.

See Configuring License Manager for an SAE (C-Web Interface).

- Related Topics**
- Obtaining an SRC License
  - Overview of the SRC License Server
  - Types of SRC Licenses

