

Logging Out of the C-Web Interface

To end a C-Web session at any time:

- In the top pane, click **Logout**.

- Related Topics**
- Accessing the C-Web Interface
 - Enabling the C-Web Interface
 - Starting the C-Web Interface
 - C-Web Interface Overview

