

Stopping the JPS

To stop the JPS:

```
user@host> disable component jps
```

The system responds with a shutdown message. If the JPS is not running when you issue the command, the system responds with the command prompt.

To start the JPS, see Starting the JPS.

- Related Topics**
- Stopping the JPS (C-Web Interface)
 - Restarting the JPS
 - Starting the JPS
 - Monitoring the JPS
 - Overview of the JPS

