

## Testing a NIC Resolution (C-Web Interface)

---

To test a NIC resolution:

1. Click **Diagnose > NIC > Resolve**.
2. Enter information as described in the Help text in the main pane, and click **OK**.

- Related Topics**
- Configuring a NIC Scenario (C-Web Interface)
  - Testing a NIC Resolution (SRC CLI)
  - SRC CLI Commands to View NIC Resolution Data
  - Troubleshooting NIC Data Resolution
  - Overview of the NIC Resolution Process

