

Restarting a NIC Resolver (SRC CLI)

In rare instances, such as when you are troubleshooting a NIC configuration, you may want to restart a NIC resolver.

To restart a NIC resolver:

- From operational mode, restart a resolver.

```
user@host>request nic restart resolver name name
```

You can restart all NIC resolvers by omitting a resolver name for the **request nic restart resolver** command.

You can also restart a NIC resolver at the slot level.

- Related Topics**
- Stopping a NIC Host on a C-series Controller (SRC CLI)
 - Restarting the NIC (SRC CLI)
 - Restarting a NIC Agent (SRC CLI)
 - Changing NIC Configurations (SRC CLI)

