

Starting the NIC (SRC CLI)

Start the NIC component before you configure it. When you enable NIC for the first time, it creates the default operating properties for the component.

To start NIC:

- From operational mode, enable the NIC.

```
user@host> enable component nic
```

Starting NICHOST: may take a few minutes...

- Related Topics**
- Starting the NIC (C-Web Interface)
 - Configuring the NIC (SRC CLI)
 - Reviewing and Changing Operating Properties for NIC (SRC CLI)
 - Restarting the NIC (SRC CLI)
 - Stopping a NIC Host on a C-series Controller (SRC CLI)

