

Starting the NIC (C-Web Interface)

Start the NIC component before you configure a NIC configuration scenario.

To start the NIC component:

1. Select **Manage > Enable**.

The Enable pane appears.

2. In the Component box, select **NIC**, and click **OK**.

Related Topics

- Before You Configure the NIC
- Starting the NIC (SRC CLI)
- Configuring the NIC (C-Web Interface)
- Restarting the NIC (C-Web Interface)
- Stopping a NIC Host on a C-series Controller (C-Web Interface)

