

Reloading Services

To reload the services, scopes, virtual routers, policies, service mutex groups, and service schedules from the directory:

```
user@host> request sae load services
```

Related service sessions are activated, deactivated, or reactivated as needed.

Related Topics

- Reloading the SAE Configuration
- Viewing Information About Services with the CLI
- Viewing Information About Services
- Commands to Manage SAE Data
- Reloading the SAE Data
- Reloading Subscriptions

