

Starting the SAE with the C-Web Interface

You must configure licenses before you start the SAE. When you start the SAE, the software verifies that a valid license is available. If no license is found, the SAE does not start.

To start the SAE:

1. Click **Manage > Enable**.

The Enable pane appears.

2. From the Component list, select **SAE**, and click **OK**.

Related Topics

- Starting the SAE (SRC CLI)
- Initially Configuring the SAE with the C-Web Interface
- Stopping the SAE with the C-Web Interface
- Viewing Information About the Directory Blacklist
- Role of the SAE

