

## Starting the SDX SNMP Agent

---

Before you start the SDX SNMP agent:

1. Perform the initial configuration tasks.

See [\[Unresolved xref\]](#).

2. Configure the SDX SNMP agent.

See Configuring the SDX SNMP Agent.

Manually start the SDX SNMP agent the first time it runs. Thereafter, the agent automatically restarts.

To start the SNMP agent:

```
user@host> enable component agent
```

The system responds with a start message. If the SNMP agent is already running, the system responds with a warning message indicating that fact.

- Related Topics**
- Starting the SDX SNMP Agent (C-Web Interface)
  - Stopping the SDX SNMP Agent
  - Monitoring the SDX SNMP Agent

