

## Connecting to a Remote Host Through Telnet

---

To connect to a remote host through Telnet:

- In operational mode, enter the following command.

```
user@host> telnet host <port port>
```

where:

- *host* —Hostname or IP address of the remote host.
- **port** *port* —(Optional) Port number or service name on the remote host.

### Related Topics

- Connecting to a Remote Host Through SSH
- Configuring a C-series Controller to Accept Telnet Connections (SRC CLI)
- Securing Connections Between a C-series Controller and Remote Hosts

