

## Viewing Device Statistics for SRC-ACP (C-Web Interface)

**Purpose** View device statistics for SRC-ACP.

**Action** To view device statistics for SRC-ACP:

1. Click **ACP > Statistics > Device**.

The Statistics/Device pane appears.

The screenshot shows the Juniper C-Web Interface. At the top, there are tabs: Monitor, Configure, Diagnose, and Manage. The 'Monitor' tab is active. On the left, there is a sidebar with a tree view containing: ACP (selected), CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'ACP' and 'Statistics / Device'. It contains three input fields: 'Filter' (a text box), 'Slot' (a text box), and 'Style' (a dropdown menu). To the right of these fields are help text boxes: for 'Filter', 'Name of the device. Value: All or part of the device name. Default: No value'; for 'Slot', 'Number of the slot for which you want to configure values. Value: Currently, the chassis has only one slot. The valid value is 0. Default value: 0'; and for 'Style', 'Output style. Choices: brief: Display only device names Default value: detail'. Below the input fields are 'OK' and 'Reset' buttons. At the bottom of the interface, there is a footer with copyright information and the Juniper logo.

2. In the Filter box, enter a substring of the virtual router name, or leave the box blank to display information for all virtual routers.
3. In the Slot box, enter the number of the slot for which you want to display device statistics.
4. Select an output style from the Style list.
5. Click **OK**.

The Statistics/Device pane displays router statistics for SRC-ACP.

- Related Topics**
- Configuring SRC-ACP Properties (C-Web Interface)
  - Viewing General Statistics for SRC-ACP (C-Web Interface)
  - Viewing Device Statistics for SRC-ACP (C-Web Interface) on page 1

