

Viewing JPS Message Flow Statistics with the C-Web Interface

Purpose View information about JPS message flows.

Action 1. Click **JPS > Statistics > Message Handler > Message Flows**.

The Statistics/Message Handler/Message Flow pane appears.

The screenshot shows the Juniper C-Web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various system components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS (highlighted), NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'JPS Statistics / Message Handler / Message Flow'. It features an 'Id' input field with a placeholder text box that reads: 'Identifier for message flow. Value: All or part of the message flow ID. If the message flow ID filter is not specified, all message flows are selected. Default: No value'. Below the input field are 'OK' and 'Reset' buttons. The bottom of the interface shows the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo 'Juniper your Net.'.

2. In the ID box, enter a message flow ID, or leave the box blank to display statistics for all message flows.
3. Click **OK**.

The Statistics/Message Handler/Message Flow pane displays the message flow statistics.

- Related Topics**
- Viewing JPS State
 - Viewing JPS Message Handler Statistics with the C-Web Interface
 - Overview of the JPS

