

## Displaying JPS Status

---

**Purpose**    Display the JPS status.

**Action**    `user@host> show component`

The system responds with a status message.

- Related Topics**
- [Displaying JPS Status \(C-Web Interface\)](#)
  - [Monitoring the JPS](#)
  - [Viewing JPS State](#)

