

## Viewing Information About Components Installed (SRC CLI)

**Purpose** View release and status information for SRC components installed on a system.

**Action** user@host> show component

### Installed Components

Name	Version	Status
cli	Release: 7.0 Build: CLI.A.7.0.0.0171	running
acp	Release: 7.0 Build: ACP.A.7.0.0.0174	disabled
jdb	Release: 7.0 Build: DIRXA.A.7.0.0.0176	running
editor	Release: 7.0 Build: EDITOR.A.7.0.0.0176	running
redir	Release: 7.0 Build: REDIR.A.7.0.0.0176	disabled
licSvr	Release: 7.0 Build: LICSVR.A.7.0.0.0179	stopped
nic	Release: 7.0 Build: GATEWAY.A.7.0.0.0170	disabled
sae	Release: 7.0 Build: SAE.A.7.0.0.0166	running
www	Release: 7.0 Build: UMC.A.7.0.0.0169	disabled
jps	Release: 7.0 Build: JPS.A.7.0.0.0172	disabled
agent	Release: 7.0 Build: SYSMAN.A.7.0.0.0174	running
webadm	Release: 7.0 Build: WEBADM.A.7.0.0.0173	disabled

**Meaning** Table 1 on page 1 describes the output fields for the show component command. Output fields are listed in the order in which they appear.

**Table 1: Output Fields for show component**

Field Name	Field Description
Name	Name of the component
Version	Version of the component
Status	State of the component, running or disabled

- Related Topics**
- Viewing Information About Components Installed (C-Web Interface)
  - Viewing C-series Controller Information
  - Directories on the C-series Controller

