


Viewing Information About System Disk Status

Purpose View information about the system disk status.

Action 1. Click **Monitor > Disk > Status**.

The Status pane appears.

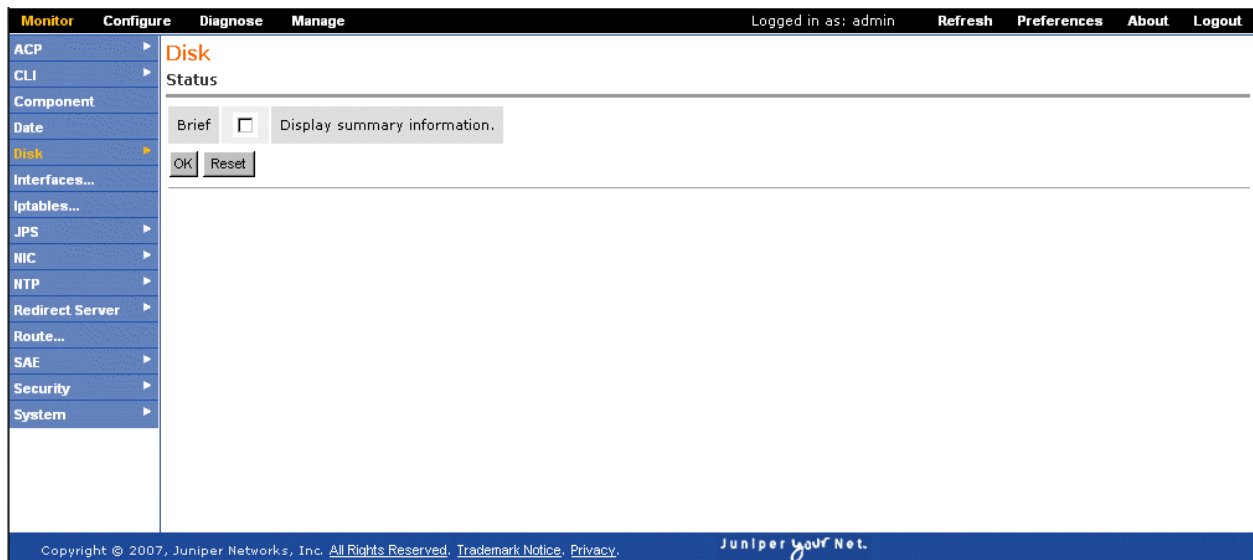

2. To display a summary of the system disk status, select the **Brief** check box.
3. Click **OK**.

The Status pane displays the system disk status.

- Related Topics**
- Viewing Information About a C-series Controller
 - Viewing Information About the System (C-Web Interface)
 - Viewing Information About Boot Messages (C-Web Interface)

