

Viewing the System Date and Time (C-Web Interface)

Purpose View the system date and time.

Action Click **Monitor > Date**.

The Date pane displays the date and time of the system.



- Related Topics**
- Setting the Time Zone (SRC CLI)
 - Setting the System Date (SRC CLI)
 - Viewing NTP Peers (C-Web Interface)
 - Viewing Statistics for NTP (C-Web Interface)
 - Viewing NTP Status (C-Web Interface)

