

## Viewing Host Statistics

**Purpose** View NIC host statistics.

**Action** 1. Click **Monitor > NIC > Statistics > Host**.

The Statistics/Host pane appears.

The screenshot shows the Juniper C-Web Interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various system components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC (highlighted), NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'NIC Statistics / Host'. It contains a 'Slot' input box with a dropdown arrow, and 'OK' and 'Reset' buttons below it. The bottom of the interface shows the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display host statistics.
3. Click **OK**.

The Statistics/Host pane displays the properties for the host.

- Related Topics**
- Configuring the NIC (C-Web Interface)
  - Viewing Host Process Statistics
  - Viewing Statistics for a NIC Host

