

Viewing NTP Peers (C-Web Interface)

Purpose View a list of NTP peers.

Action 1. Click **Monitor > NTP > Associations**.

The Associations pane appears.



2. To suppress symbolic addressing, select the **No Resolve** box.

3. Click **OK**.

The Associations pane displays the list of NTP peers.

- Related Topics**
- Configuring an NTP Peer for a C-series Controller (C-Web Interface)
 - Viewing NTP Peers (SRC CLI)
 - Viewing Statistics for NTP (C-Web Interface)
 - Viewing NTP Status (C-Web Interface)

