

Viewing NTP Status (C-Web Interface)

Purpose Display status for NTP.

Action 1. Click **Monitor > NTP > Status**.

The Status pane appears.



2. To suppress symbolic addressing, select the **No Resolve** box.

3. Click **OK**.

The Status pane displays NTP status.

- Related Topics**
- Viewing NTP Peers (SRC CLI)
 - Viewing Statistics for NTP (SRC CLI)
 - Viewing Internal Variables for NTP (SRC CLI)
 - Viewing NTP Peers (C-Web Interface)
 - Viewing Statistics for NTP (C-Web Interface)

