

Assessing Load for Redirect Server (C-Web Interface)

Purpose View the number of requests sent to the redirect server, and whether the requests reach the configured limit for the server and for server users. You can then use this information to fine-tune the properties for redirect server.

- Action**
1. Click **Monitor > Redirect Server > Statistics**.

The Redirect Server Statistics pane appears.
 2. From the Output Style list, select an output style as described in the Help text in the main pane.
 3. Click **OK**. The Redirect Server pane displays the following statistics:
 - Uptime
 - Accepted requests
 - Rejected requests
 - Number of user-limit leaky buckets
 - Number of user limits reached
 - Number of global limits reached

You can also obtain statistics for redirect server through SNMP. The name of the MIB for redirect server is Juniper-SDX-REDIRECTOR-MIB.

- Related Topics**
- Configuring General Properties for the Redirect Server (SRC CLI)
 - Viewing Statistics for the Redirect Server (C-Web Interface)
 - Viewing Information About Filtered Traffic (C-Web Interface)
 - Overview of Traffic Redirection

