

Verifying Configuration for the Redirect Server (SRC CLI)

Purpose Verify the configuration for the redirect server.

Action At the [edit redirect-server] hierarchy level, enter the **show** command:

```
[edit redirect-server]
user@host# show
tcp-port 8800;
destination-url ;
refresh;
refresh-document etc/refresh.html;
user-name nobody;
request-rate 12000;
request-burst-size 18000;
client-rate 25;
client-burst-size 50;
```

- Related Topics**
- [Configuring the Redirect Server \(SRC CLI\)](#)
 - [Viewing Statistics for the Redirect Server \(SRC CLI\)](#)
 - [Viewing Statistics for Filtered Traffic](#)
 - [Overview of Traffic Redirection](#)

