

Viewing Statistics for All JUNOSe Device Drivers (C-Web Interface)

Purpose To view SNMP statistics for all JUNOSe device driver:

Action 1. Click **Monitor > SAE > Statistics > Device > Common**.

The Common pane appears.

2. Enter information as described in the Help text in the main pane, and click **OK**.

The Common pane displays statistics for the JUNOSe device driver.

- Related Topics**
- Troubleshooting Problems with Managing JUNOSe Routers
 - Viewing Statistics for Specific JUNOSe Device Drivers (SRC CLI)
 - Viewing the State of JUNOSe Device Drivers (C-Web Interface)
 - Viewing the State of JUNOSe Device Drivers (C-Web Interface)
 - Viewing Statistics for All JUNOSe Device Drivers (SRC CLI)

