

Viewing Statistics for Specific JUNOSe Device Drivers (C-Web Interface)

Purpose To view SNMP statistics about a specific JUNOSe device driver:

Action 1. Click **Monitor > SAE > Statistics > Device**.

The Device pane appears.

2. In the Device Name box, enter a full or partial device driver name for which you want to display information, or leave the box blank to display all devices.

For JUNOSe router drivers, use the format:

< virtual router name > @ < router name >

3. Enter information as described in the Help text in the main pane, and click **OK**.

The Device pane displays statistics for a specific JUNOSe device driver.

- Related Topics**
- Viewing Statistics for Specific JUNOSe Device Drivers (SRC CLI)
 - Monitoring Interactions Between the SAE and the JUNOSe Router
 - Troubleshooting Problems with Managing JUNOSe Routers
 - Viewing Statistics for All JUNOSe Device Drivers (C-Web Interface)

