

## Viewing Information About Licenses

**Purpose** View information about licenses.

**Action** 1. Click **Monitor > SAE > Licenses**.

The Licenses pane appears.

The screenshot shows the Juniper SAE web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Monitor' menu is expanded, showing a list of options: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The 'SAE' menu item is selected, and the 'Licenses' pane is displayed. The pane contains a 'Slot' input box with a value of '0'. To the right of the input box is a text area that reads: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. Below the input box are 'OK' and 'Reset' buttons. The bottom of the interface shows the copyright notice: 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo.

2. In the Slot box, enter the number of the slot for which you want to display license information.
3. Click **OK**.

The Licenses pane displays license information.

- Related Topics**
- Viewing SNMP Statistics for Licenses by Device
  - Viewing SNMP Statistics for Local Licenses
  - Viewing SNMP Statistics for Client Licenses
  - Viewing SNMP Information for Local Licenses with the CLI
  - Viewing SNMP Information for Client Licenses with the CLI

