

Viewing Information About Threads

Purpose View information about the threads and their priority on the SAE.

Action 1. Click **Monitor > SAE > Threads**.

The Threads pane appears.

The screenshot shows the Juniper Networks configuration interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various configuration categories: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area is titled 'SAE' and 'Threads'. It contains a 'Slot' input box with a value of '0'. A tooltip explains: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. Below the input box are 'OK' and 'Reset' buttons. The footer shows the copyright notice for Juniper Networks, Inc. (© 2007) and the 'Juniper your Net.' logo.

2. In the Slot box, enter the number of the slot for which you want to display thread information.
3. Click **OK**.

The Threads pane displays information about threads.

Related Topics ■ Viewing Information About Threads with the CLI

