

Viewing Message Handler Information for the Diameter Server (SRC CLI)

Purpose View information about the message handler and message flows for the Diameter server.

Action To display information about the message handler for the Diameter server:

```
user@host > show diameter statistics message-handler
```

To display information about message flows for the Diameter server:

```
user@host > show diameter statistics message-handler message-flow
```

To display information about a specific message flow:

```
user@host > show diameter statistics message-handler message-flow id id
```

