

## Viewing SNMP Statistics for Licenses by Device

**Purpose** View SNMP statistics for licenses by device.

**Action** 1. Click **Monitor > SAE > Statistics > License > Device**.

The Statistics/License/Device pane appears.

- 
2. In the Device Name box, enter a full or partial device name for which you want to display information, or leave the box blank to display SNMP statistics for all devices.

For JUNOSe router drivers, use the format:

**<virtual router name>@<router name>**

For JUNOS router drivers and PCMM drivers, use the format:

**default@<router name>**

- 
- 
3. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for device licenses.
4. Select an output style from the Style list.
5. Click **OK**.

The Statistics/License/Device pane displays statistics for virtual router licenses.

### Related Topics

- Connections to Managed Devices
- Viewing SNMP Information for Local Licenses with the CLI
- Viewing SNMP Information for Client Licenses with the CLI
- Viewing SNMP Information for Licenses on Virtual Routers with the CLI

- Viewing SNMP Statistics for Client Licenses
- Viewing SNMP Statistics for Local Licenses