

Viewing SNMP Statistics for Subscriber Sessions and Service Sessions

Purpose View SNMP statistics about subscriber sessions and service sessions.

Action 1. Click **Monitor > SAE > Statistics > Sessions**.

The Statistics/Sessions pane displays statistics for subscriber sessions and service sessions.

The screenshot shows the Juniper Networks configuration interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various configuration categories: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area is titled 'SAE Statistics / Sessions'. It features a 'Slot' input box with a value of '0'. A tooltip explains: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. Below the input box are 'OK' and 'Reset' buttons. The footer contains copyright information for Juniper Networks, Inc. (2007) and the slogan 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for specific devices.
3. Click **OK**.

The Statistics/Sessions pane displays statistics for subscriber sessions and service sessions.

- Related Topics**
- Configuring SAE Properties for Global Default SNMP Communities for Use with JUNOS Routers and JUNOS Routing Platforms
 - Viewing SNMP Statistics for Devices
 - Viewing SNMP Statistics for Specific Devices

