

Viewing Statistics for External Subscriber Monitor (C-Web Interface)

Purpose View statistics for External Subscriber Monitor.

Action 1. Click **Monitor > Ext Sub Monitor > Statistics > RADIUS Accounting**.

The Statistics/RADIUS Accounting pane appears.

2. In the Client Address box, enter the address of the client for which you want to view statistics.

3. Select an output style from the Style list.

4. Click **OK**.

The Statistics/RADIUS Accounting pane displays the RADIUS statistics for External Subscriber Monitor.

- Related Topics**
- Configuring External Subscriber Monitor
 - Viewing Statistics for External Subscriber Monitor
 - Viewing Statistics for External Subscriber Event Notifications (C-Web Interface)
 - Viewing Statistics for the Agent Process

