

## Overview of Configuration for the SRC CLI

---

You can use the SRC CLI on a C Series Controller. Most SRC configuration data is stored in the Juniper Networks database on the C Series Controller. When you use the Juniper Networks database, you can use the default configuration for the directory connection. You can add backup directories and change the password to the directory.

The CLI for policies, services, and subscribers requires that you configure access and that you explicitly start that part of the CLI.

You configure access to the SRC CLI by setting up user access accounts.

- Related Topics**
- Overview of the Policies, Services, and Subscribers CLI
  - Overview of SRC User Accounts
  - Configuration Statements for SRC CLI Directory Access
  - *SRC PE CLI Command Reference*

---

Published: 2009-09-25