

Modifying the JPS Configuration (C-Web Interface)

Tasks to modify the current JPS configuration are:

1. Configuring General Properties for the JPS (C-Web Interface) on page 1
2. Specifying a Policy Server Identifier in Messages (C-Web Interface) on page 1
3. Configuring Logging Destinations (C-Web Interface) on page 1
4. Specifying Connections to the Application Managers (C-Web Interface) on page 1
5. Specifying Connections to RKs (C-Web Interface) on page 2

Configuring General Properties for the JPS (C-Web Interface)

To configure general properties for the JPS:

1. Click **Configure**, and expand **Slot > Slot: 0**, and then click **JPS**.

The JPS pane appears.

2. Enter the information in the main pane as described in the Help text, and click **Apply**.

Specifying a Policy Server Identifier in Messages (C-Web Interface)

To configure a policy server identifier for the JPS:

1. Click **Configure**, expand **Slot > Slot: 0**, and then click **JPS**.

The JPS pane appears.

2. In the Policy Server ID box, enter a value as described in the Help text in the main pane.
3. Enter information in the remaining boxes as described in the Help text in the main pane, and click **Apply**.

Configuring Logging Destinations (C-Web Interface)

You can configure the logging destination to store messages in a file, or to a system logging facility (Syslog)

You can create or modify loggers. By default, the JPS has four logging destinations (log1, log2, log3, and log4).

Specifying Connections to the Application Managers (C-Web Interface)

This section describes how to configure the application manager-to-policy server interface (PKT-MM3) so that the policy server can communicate with application managers.

To configure the connections to the application managers:

1. Click **Configure**, expand **Slot > Slot: 0 > JPS**, and then click **AM Interface**.

The AM Interface pane appears.

2. Enter the information in the main pane as described in the Help text, and click **Apply**.

Specifying Connections to RKSs (C-Web Interface)

To configure the policy server-to-RKS interface (PKT-MM4) so that policy events can be sent to the RKS, you can configure RKS pairs and their associated application managers.

To configure the policy server-to-RKS interface:

1. Click **Configure**, expand **Slot > Slot: 0 > JPS**, and then click **RKS Interface**.

The RKS Interface pane appears.

2. Enter the information in the main pane as described in the Help text, and click **Apply**.

- Related Topics**
- Modifying the JPS Configuration
 - Configuring the JPS (C-Web Interface)
 - Modifying the Subscriber Configuration (C-Web Interface)
 - Overview of the JPS

Published: 2009-09-18