

Configuring RKS Pairs (C-Web Interface)

- Configuring Connections for RKS Pairs (C-Web Interface) on page 1
- Configuring RKS Pairs for Associated Application Managers (C-Web Interface) on page 1
- Specifying Connections to CMTS Devices (C-Web Interface) on page 2

Configuring Connections for RKS Pairs (C-Web Interface)

By default, the JPS has four RKS pairs. All parameters that share the same RKS pair name configure the connection to that RKS pair. Any configured RKS pair can be used as the value for the default RKS pair or the RKS pair associated with a specific application manager.



NOTE: When running more than one JPS in a group to provide redundancy, all the JPSs in that group must have the same RKS pair configuration (including the default RKS pair and any configured RKS pairs associated with a specific application manager).

To configure the RKS pair:

1. Click **Configure**, and expand **Slot > Slot: 0 > JPS > RKS Interface**.
2. Click the specified RKS pair (for example, pair 1).

The RKS Pair:pair 1 pane appears.

3. Enter the information in the main pane as described in the Help text, and click **Apply**.

Configuring RKS Pairs for Associated Application Managers (C-Web Interface)

By default, the JPS has four associated application managers. All parameters that share the same application manager name configure the RKS pair to which events associated with a specific application manager are sent.

To configure the associated application manager:

1. Click **Configure**, and expand **Slot > Slot: 0 > JPS > RKS Interface**.
2. Click the specified AM (for example, AM:1).

The RKS Interface/AM:1 pane appears.

3. Enter the information in the main pane as described in the Help text, and click **Apply**.

Specifying Connections to CMTS Devices (C-Web Interface)

To configure the policy server-to-CMTS interface (PKT-MM2) so that the policy server can communicate with CMTS devices:

1. Click **Configure**, expand **Slot > Slot: 0 > JPS**, and then click **CMTS Interface**.

The CMTS Interface pane appears.

2. Enter the information in the main pane as described in the Help text, and click **Apply**.

- Related Topics**
- Configuring Connections to RKSs
 - Specifying Connections to CMTS Devices
 - Modifying the JPS Configuration (C-Web Interface)
 - Viewing JPS RKS Statistics with the C-Web Interface
 - Viewing JPS CMTS Connections with the C-Web Interface

Published: 2009-09-18