

Configuring the JPS

You can modify the JPS configuration, which includes configuring the logging destinations and connections to the JPS interfaces. Any configuration changes will be applied within 15 seconds.

Before you configure the JPS, deploy an SRC-managed PCMM network. For more information about PCMM and the SRC software, see [Overview of a PCMM Environment](#).

You can configure the subscriber configuration, which maps a subscriber address to the CMTS address.

The tasks to configure the JPS for a cable network environment are:

- Modifying the JPS Configuration
- Modifying the Subscriber Configuration

In addition to configuring the JPS, you might need to perform these tasks:

- Configuring the SAE to Interact with the JPS
- Using the NIC Resolver

Related Topics

- Overview of the JPS
- Configuring the JPS (C-Web Interface)
- Configuring General Properties for the JPS
- Monitoring the JPS
- Configuration Statements for the JPS

Published: 2009-09-23