

Changing NIC Configurations (C-Web Interface)

If you change the type of NIC resolution that you use in your network (for example, from the OnePop configuration scenario to the OnePopAllRealms configuration scenario), delete any existing data and specify a static DN that identifies the DN for the new NIC configuration scenario; otherwise, the new NIC configuration may not perform resolutions correctly.

To change the type of NIC resolution that you use in your network:

1. Disable the NIC:
 - a. Click **Manage > Disable**.
 - b. In the Component list in the main pane, select **NIC**, and click **OK**.
2. Delete the NIC configuration data for the existing configuration scenario from the directory.

- a. Click **Manage > Request > NIC > Clear > Scenario Data**.

The Scenario Data pane appears.

- b. In the **Slot** box, enter the number of the slot that contains the NIC scenario configuration (typically, slot 0), and click **OK**.
3. Restart the NIC host:
 - a. Click **Manage > Restart**.
 - b. In the Component list in the main pane, select **NIC**, and click **OK**.
4. Configure the new NIC scenario.

- Related Topics**
- Configuring a NIC Scenario (C-Web Interface)
 - Changing NIC Configurations (SRC CLI)
 - Testing a NIC Resolution (C-Web Interface)

Published: 2009-09-18