

## Specifying a Basic NTP Configuration on a C Series Controller (C-Web Interface)

---

We recommend that you configure NTP on C Series Controllers.

To configure NTP to operate on a C Series Controller:

1. Click **Configure**, expand **System**, and then click **NTP**.

The NTP pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.



**NOTE:** If you do not configure a boot server, NTP cannot synchronize with a time server if the server's time is very far off the local system's time.

---

**Related Topics** ■ [Configuring NTP on a C Series Controller](#)

---

Published: 2009-09-18