

## Configuring TCP Conditions (C-Web Interface)

---

To configure TCP conditions:

1. In the side pane, expand a traffic condition, and select **TCP Condition**.
2. Click **Create**, enter information as described in the Help text in the main pane, and click **Apply**.

To configure source and destination ports for TCP conditions:

1. In the side pane, expand **TCP Condition > Source Port**, and select **Port**.
2. Click **Create**, enter information as described in the Help text in the main pane, and click **Apply**.
3. In the side pane, expand **TCP Condition > Destination Port**, and select **Port**.
4. Click **Create**, enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Configuring TCP Conditions (SRC CLI)
  - Configuring Protocol Conditions (C-Web Interface)

---

Published: 2009-09-18