

Configuring Destination Networks (C-Web Interface)

To configure a destination network in a classify-traffic condition:

1. In the side pane, expand a traffic condition, expand **Destination Network**, and select **Network**.
2. Click **Create**, enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Configuring Destination Networks (SRC CLI)
 - Configuring Destination Grouped Networks (C-Web Interface)

Published: 2009-09-18