

## Configuring a C Series Controller to Accept NETCONF Connections (SRC CLI)

---

Use the following configuration statements to enable NETCONF access from the [edit] hierarchy level:

```
system services netconf {  
  ssh;  
}
```

To configure the C Series Controller to accept NETCONF connections:

1. From configuration mode, access the [edit system services netconf] hierarchy level.

```
[edit]  
user@host# edit system services netconf
```

2. (Optional) Enable NETCONF to run over SSH.

```
[edit system services netconf]  
user@host# set ssh
```

- Related Topics**
- [Configuring a C Series Controller to Accept NETCONF Connections \(C-Web Interface\)](#)
  - [Configuring a C Series Controller to Accept SSH Connections \(SRC CLI\)](#)
  - [Configuring a C Series Controller to Accept Telnet Connections \(SRC CLI\)](#)

---

Published: 2009-09-25