

## Configuring a C Series Controller to Accept Telnet Connections (SRC CLI)

---

You can enable Telnet to let users who have the appropriate privileges connect to a C Series Controller. The system does not allow root access over a Telnet connection.

Use the following configuration statements to enable Telnet access from the [edit] hierarchy level:

```
system services {  
  telnet;  
}
```

To configure the C Series Controller to accept Telnet connections:

```
[edit]  
user@host# set system services telnet
```

- Related Topics**
- [Configuring a C Series Controller to Accept Telnet Connections \(C-Web Interface\)](#)
  - [Configuring a C Series Controller to Accept SSH Connections \(SRC CLI\)](#)
  - [Configuring a C Series Controller to Accept NETCONF Connections \(SRC CLI\)](#)
  - [Connecting to a Remote Host Through SSH](#)

---

Published: 2009-09-25