

## Configuring the Directory Location for SAE Data with the C-Web Interface

---

You can configure the locations for dynamic and static configuration data in the directory.

To configure the directory location for configuration data:

1. Click **Configure**, and expand **Slot**.
2. Expand the slot for which you want to configure SAE, expand **SAE**, and then click **Initial**.

The Initial pane appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Initially Configuring the SAE with the C-Web Interface
  - Configuring Local Properties for the SAE with the C-Web Interface
  - Configuring the RADIUS Local IP Address and NAS ID with the C-Web Interface

---

Published: 2009-09-18