

Initially Configuring the SAE with the C-Web Interface

To initially configure the SAE:

- (Optional) Create a configuration group for the SAE.

See Configuring an SAE Group with the C-Web Interface

- Configure local properties for the SAE.

See Configuring Local Properties for the SAE with the C-Web Interface

- Configure a local IP address and NAS ID that the SAE uses to communicate with RADIUS servers.

See Configuring the RADIUS Local IP Address and NAS ID with the C-Web Interface

- Configure the location of the directory that contains SAE data.

See Configuring the Directory Location for SAE Data with the C-Web Interface

Related Topics

- Initially Configuring the SAE
- Starting the SAE with the C-Web Interface
- Configuring LDAP Access to Directory Data with the C-Web Interface
- Reloading the SAE Configuration
- Configuring the SAE to Store Log Messages in a File (C-Web Interface)

Published: 2009-09-18