

Configuring the SAE Community Manager with the C-Web Interface

To configure the SAE community manager that manages PCMM device communities:

1. Click **Configure**, expand **Shared > SAE**, and then expand the SAE group for which you want to manage PCMM devices.
2. In the side pane, expand **Configuration > External Interface Features: PCMMCommunityManager**, and then click **Community Manager**.

The Community pane appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- For information about setting up SAE groups, see [Configuring an SAE Group](#)
 - [Setting Up SAE Communities \(C-Web Interface\)](#)
 - [Configuring the SAE Community Manager](#)
 - [Using the SAE in a PCMM Environment](#)

Published: 2009-09-18