

Configuring TLS on the SAE

To configure TLS on the SAE:

1. Click **Configure**, expand **Shared > SAE > Configuration > Driver > JUNOS**, and then click **Security**.

The Security pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- Configuring the SAE to Use TLS
 - Configuring the SAE to Manage JUNOS Routing Platforms (C-Web Interface)
 - Monitoring Interactions Between the SAE and JUNOS Routing Platforms

Published: 2009-09-18