

Configuring General Properties for the SDX SNMP Agent (C-Web Interface)

To configure properties for the SDX SNMP agent:

1. Click **Configure**, and expand **SNMP > Agent**.

The SNMP pane appears.

2. Enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- Configuring General Properties for the SDX SNMP Agent
 - Configuring Initial Properties for the SDX SNMP Agent (C-Web Interface)
 - Configuring the SDX SNMP Agent (C-Web Interface)
 - Monitoring the SDX SNMP Agent (C-Web Interface)

Published: 2009-09-18